
HICH VOLTAGE TIME—SET mode LED Indicator **එක්** එක් ක φ-0 0 00000 plugs into header 01010101010 Connector IR MPS-3 Three-Output Remote Control Wiring 36" Cable IR Reciever Instructions 30—50 feet Line of Sight 0 0 _ _ _ Remote Control _ _ _

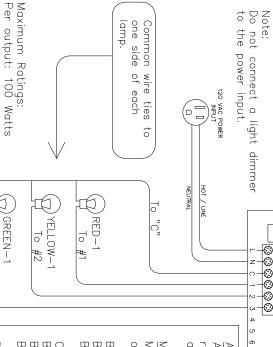

Mounting Controller

Controller total: 300 watts

To #3

away double sided tape protective film, press board firmly wiping mounting surface with rubbing alcohol, allow to dry, peel sided adhesive tape is provided on the bottom of the carrier. Carrier should be mounted to a clean, smooth surface by against mounting surface. The controller board is housed in a plastic carrier. Double

SET-LIGHT-TIMES PROCEDURE for AUTO-SEQUENCE MODE

repeating this procedure.

the yellow light to pass, and then press the CH+ button again. The red light will then come one. Allow the desired time for the red light to pass, and then press the CH+ button once more. The three unique time settings are then stored in "safe" memory, and the time setting procedure is compete. The light will begin to sequence in AUTO—SEQUENCE mode, repeating the time durations that were just preset. You can change the timing whenever you want simply by Allow the desired time for the green light to pass, and then press the CH+ button (channel UP). The yellow light will then come on. Allow the desired time for turn off for 2 seconds and then begin the time—set procedure with the GREEN light lit. (NOTE: The Red LED on the board will also light up.) To set the auto sequence times, aim the remote at the IR pick—up located at the end of the pig—tail and press the "0" button three times. The signal will

<u>Auto-sequence mode</u>

Auto—sequence mode is when the signal sequences automatically from green to yellow to red. The board always starts in this mode with the green cycle active when power is first applied to the board.

Manual Mode

or green), or set one of three Caution-modes: Manual mode allows the user to manually turn on any of the three outputs (red, yellow

Button #1 turns on the GREEN light output Button #2 turns on the YELLOW light output Button #3 turns on the RED light output YELLOW light output

Caution modes:

Button #4 starts Flashing Red Caution mode Button #5 starts Flashing Yellow Caution mode Button #6 starts Alternating RED and YELLOW back and forth

Pressing any of these buttons puts the board in Manual—Mode which means the light will stay lit (or flashing if in a caution mode) and not change to the next light automatically. It will stay like this until the board is put back into AUTO SEQUENCE mode by pressing the CH+ (channel UP) button.

Pressing the red PWR (power) button turns the controller ON and OFF

Once the times are set, the remote is no longer needed if operating in AUTO-SEQUENCE MODE. The remote is only needed to change the various MANUAL MODES, or to program/set sequence times.