

Button Press #2 sets the DON'T-WALK RED Flashing time.

(also the SIGNAL GREEN-LIGHT time)

Button Press #3 sets the YELLOW-LIGHT time.

Button press #4 sets RED-LIGHT time

(sets clearance time when linking two or more boards)

After Button Press #4, the TIME-SET LED light will turn off.

Time setting is complete. The unit will then begin to cycle as normal with the newly set times.

SLAVE vs. MASTER

Every board is a "Master" by default, meaning it wants to start it's GREEN cycle first. When linking multiple boards, only one board can start GREEN. It doesn't matter which board starts green, so any board can be chosen as the "master". Therefore, the other board(s) must be set to "SLAVE MODE".

Set as "slave" procedure:

- Step 1> Remove power from board being set to SLAVE MODE.
- Step 2> With the power OFF, hold down the black TIME SET button and apply power to the board. Continue holding the button down until the LED lights (approx. 5 seconds), then release the button.

Step 3> Remove power from board.

If you were successful, the board will power up with the RED light on instead of the GREEN light. To set the board back to it's original state as "master", repeat the same procedure.

MOUNTING BOARD

The board should be mounted via the four mounting holes located in the corners of the board. The solder-side of the circuit board should be a minimum of 1/4" from any metal or conductive surface.

Warning: Make sure HOT and NEUTRAL are not reversed on either board. Reversing HOT and NEUTRAL on linked boards will result in damage to both boards.

TO SIGNAL #2

Caution Mode

SYNC-5

HOT / LINE

120 VAC

POWER

Linking Multiple Boards

NEUTRAL

To link boards simply remove the self-linked-jumper and connect a wire from the LINK OUT to the next boards LINK IN. When you get to the last board, connect a wire from it's LINK OUT to the first boards LINK IN. This creates an IN/OUT loop from the first board to the last board. WIRE INSULATION should be rated for 250 volts or higher.

CAUTION MODE TYPE SELECT

To step through the different modes, initiate caution-mode by connecting the two caution-mode screw-terminals together. Once in caution mode, pressing the time-set button steps through the different caution modes. The currently selected "mode" is stored in non-volatile memory.