MPS-3 Rev. 2
Three-Output sequencer
Wiring Instructions

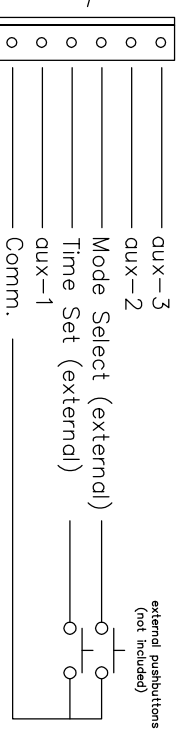**TIME-SET mode LED**
Indicator

HIGH VOLTAGE

120 VAC POWER INPUT

Note:
Do not connect a light dimmer
to the power input.

Common wire ties to one side of
each lamp.

NEUTRAL
HOT / LINE

To "C"

RED-1
To #1

YELLOW-1
To #2

GREEN-1
To #3

L N C 1 2 3 4 5 6 X

TIME SET
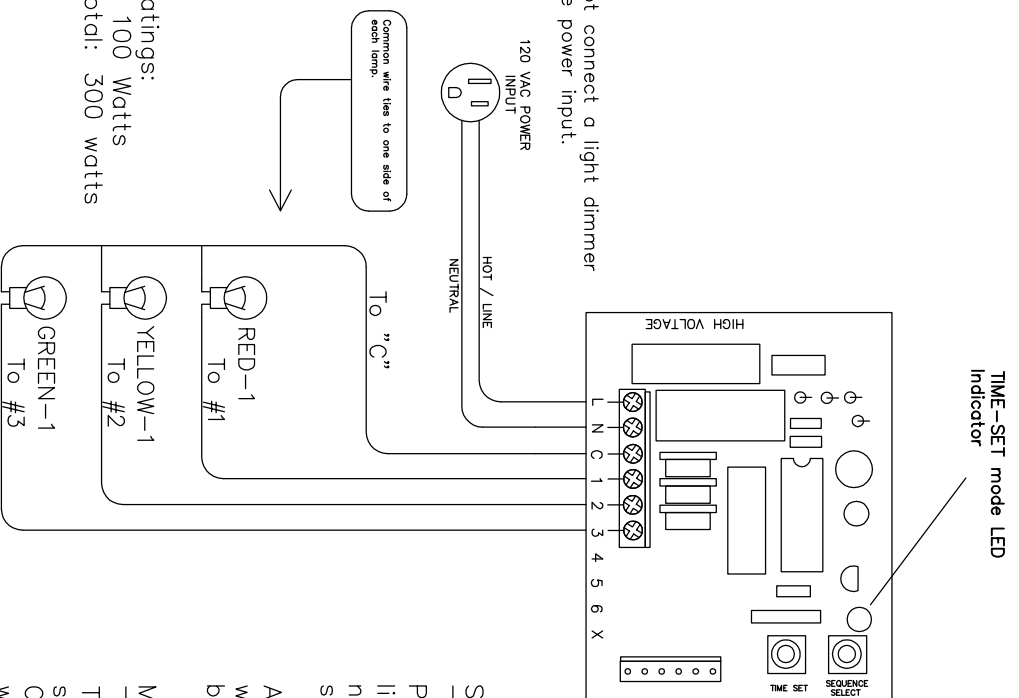
SEQUENCE SELECT

Maximum Ratings:
Per output: 100 Watts
Controller total: 300 watts

Sequence select button
Each press will advance to the next sequence pattern. LED will briefly "flutter" indicating new sequence.

TIME SET push button

aux-3
aux-2
Mode Select (external)
Time Set (external)
aux-1
Comm.

external pushbuttons
(not included)

Setting Signal Timing

Press and hold the TIME-SET button until the time-set LED lights up, then release button. The controller will begin it's normal cycle. When you want the cycle to advance to the next step, momentarily press TIME-SET button again.

After the last step in the sequence, the TIME-SET-LED light will turn off, and time setting is complete. The unit will then begin to cycle as normal with the new timing.

Mounting Controller

The controller board is housed in a plastic carrier. Double sided adhesive tape is provided on the bottom of the carrier. Carrier should be mounted to a clean, smooth surface by wiping mounting surface with rubbing alcohol, allow to dry, peel away double sided tape protective film, press board firmly against mounting surface.